


Trailer Service, Overhead

United Electric Cooperative, Inc. – Phone 1-888-581-8969

NOTE: The Cooperative may refuse to energize the service if the service drop crosses over the roof of the home. Such a crossing must be approved by the Cooperative prior to installation. In no instance will the service drop be permitted to pass closer than 8 ft. above any portion of the roof.

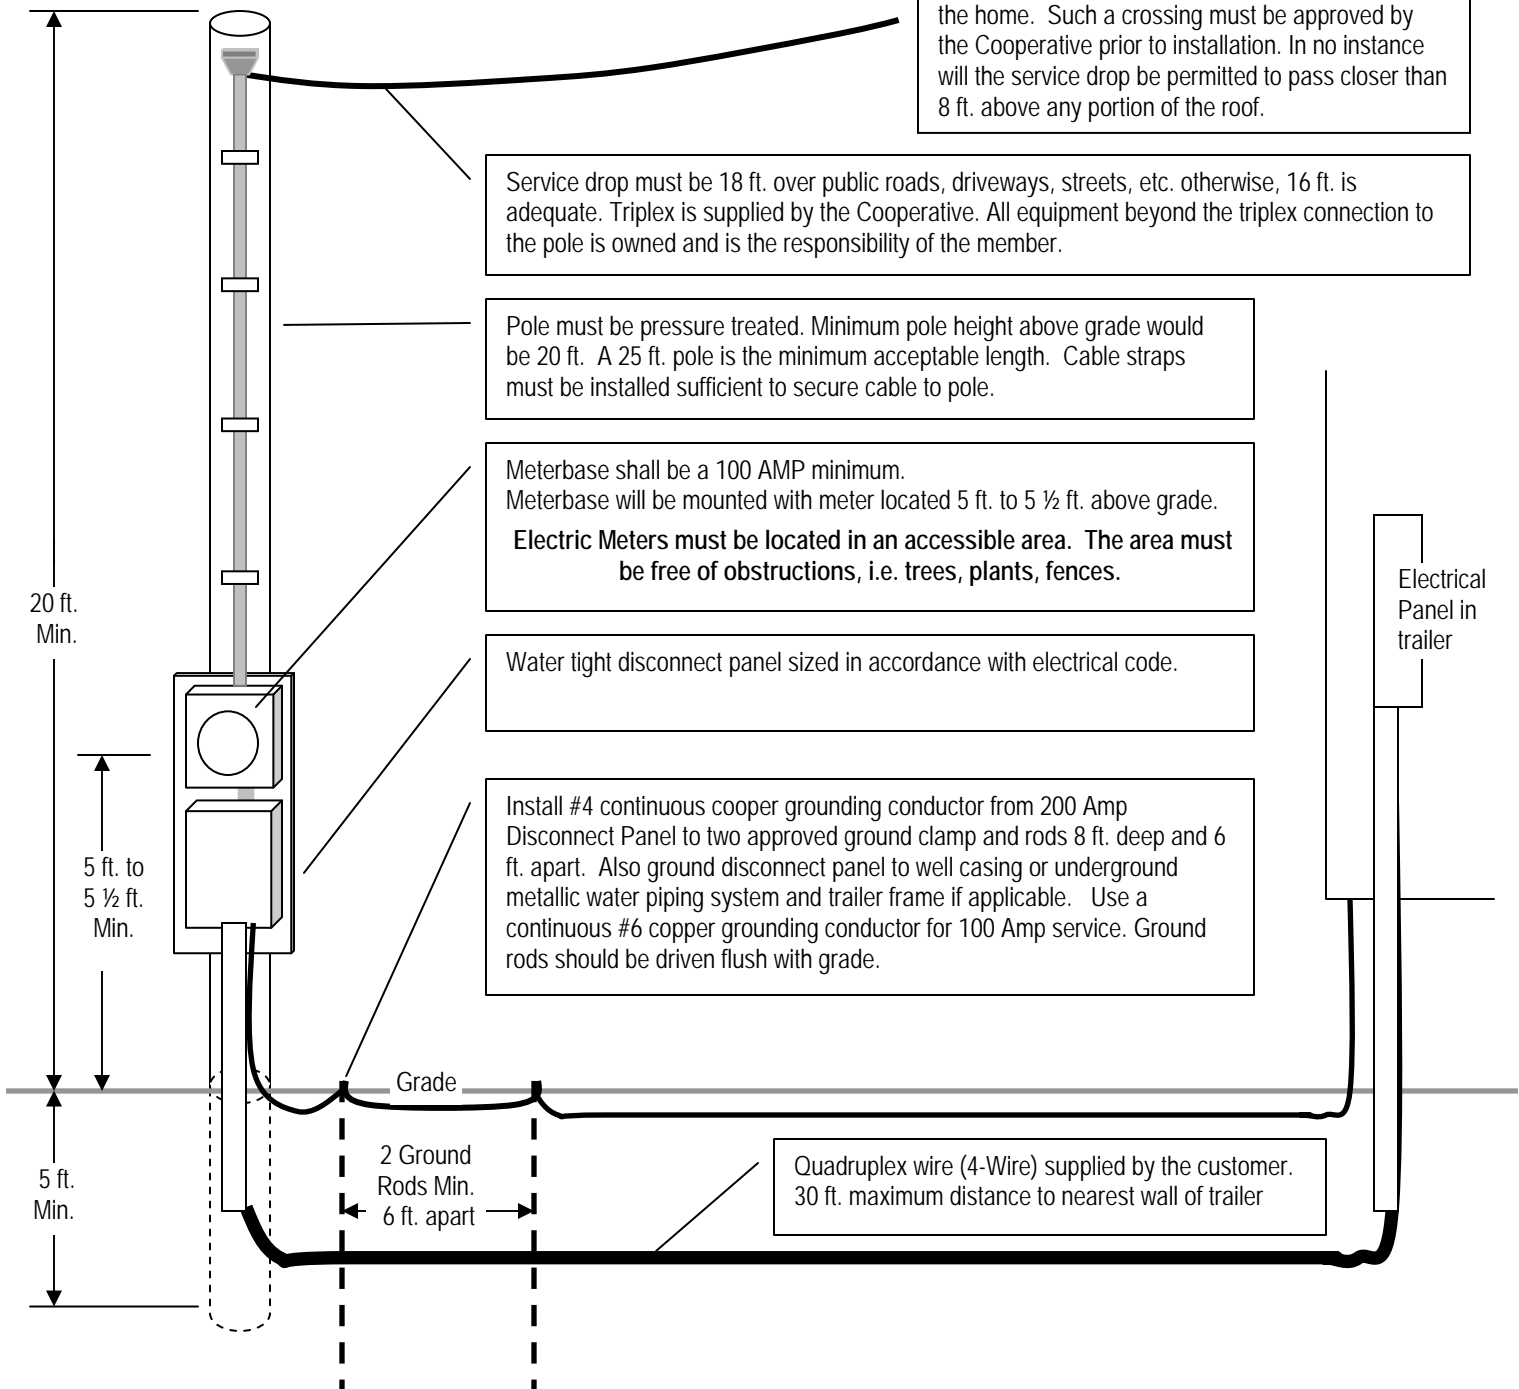

P.O. Box 688, DuBois, PA 15801
Phone 1-888 -581-8969

Meter Base Specifications

Meter base must be furnished and installed by the owner or electrical contractor. This equipment is the property of the member and the member is responsible for this equipment.

Meter base for aerial or underground services can be purchased from local electric distributors or dealers. They will not be provided by the Cooperative.

Meter base must meet the following specifications:

1. Pressure plates for connections
2. 4 jaws
3. Ringless
4. Standard Knockouts
5. Steel case
6. Horn Type bypass
7. Unused hub opening and open knockouts shall have tamperproof closing plates installed.
8. Multiple position bases shall have individual sealable cover for each position.
9. Extra position wiring space (if provided) shall be located on or near center and shall have an individual sealable cover.
10. Meter bases for underground will be 14" high x 11" wide x 4 3/8" or larger.
11. 100 Amp overhead meter base will be 8" high x 8" wide x 3 1/4" deep, minimum size with 1 1/4" hub.
12. 200 Amp overhead meter base will be 14" high x 8" wide x 3 1/2" deep, minimum size with 2" hub.

* The electrical service must pass inspection by an approved electrical inspection agency before it will be energized.

Note: United Electric Cooperative offers the installation of meter poles and complete service entrances as a Value-added Service. Prices for these services are available upon request.